


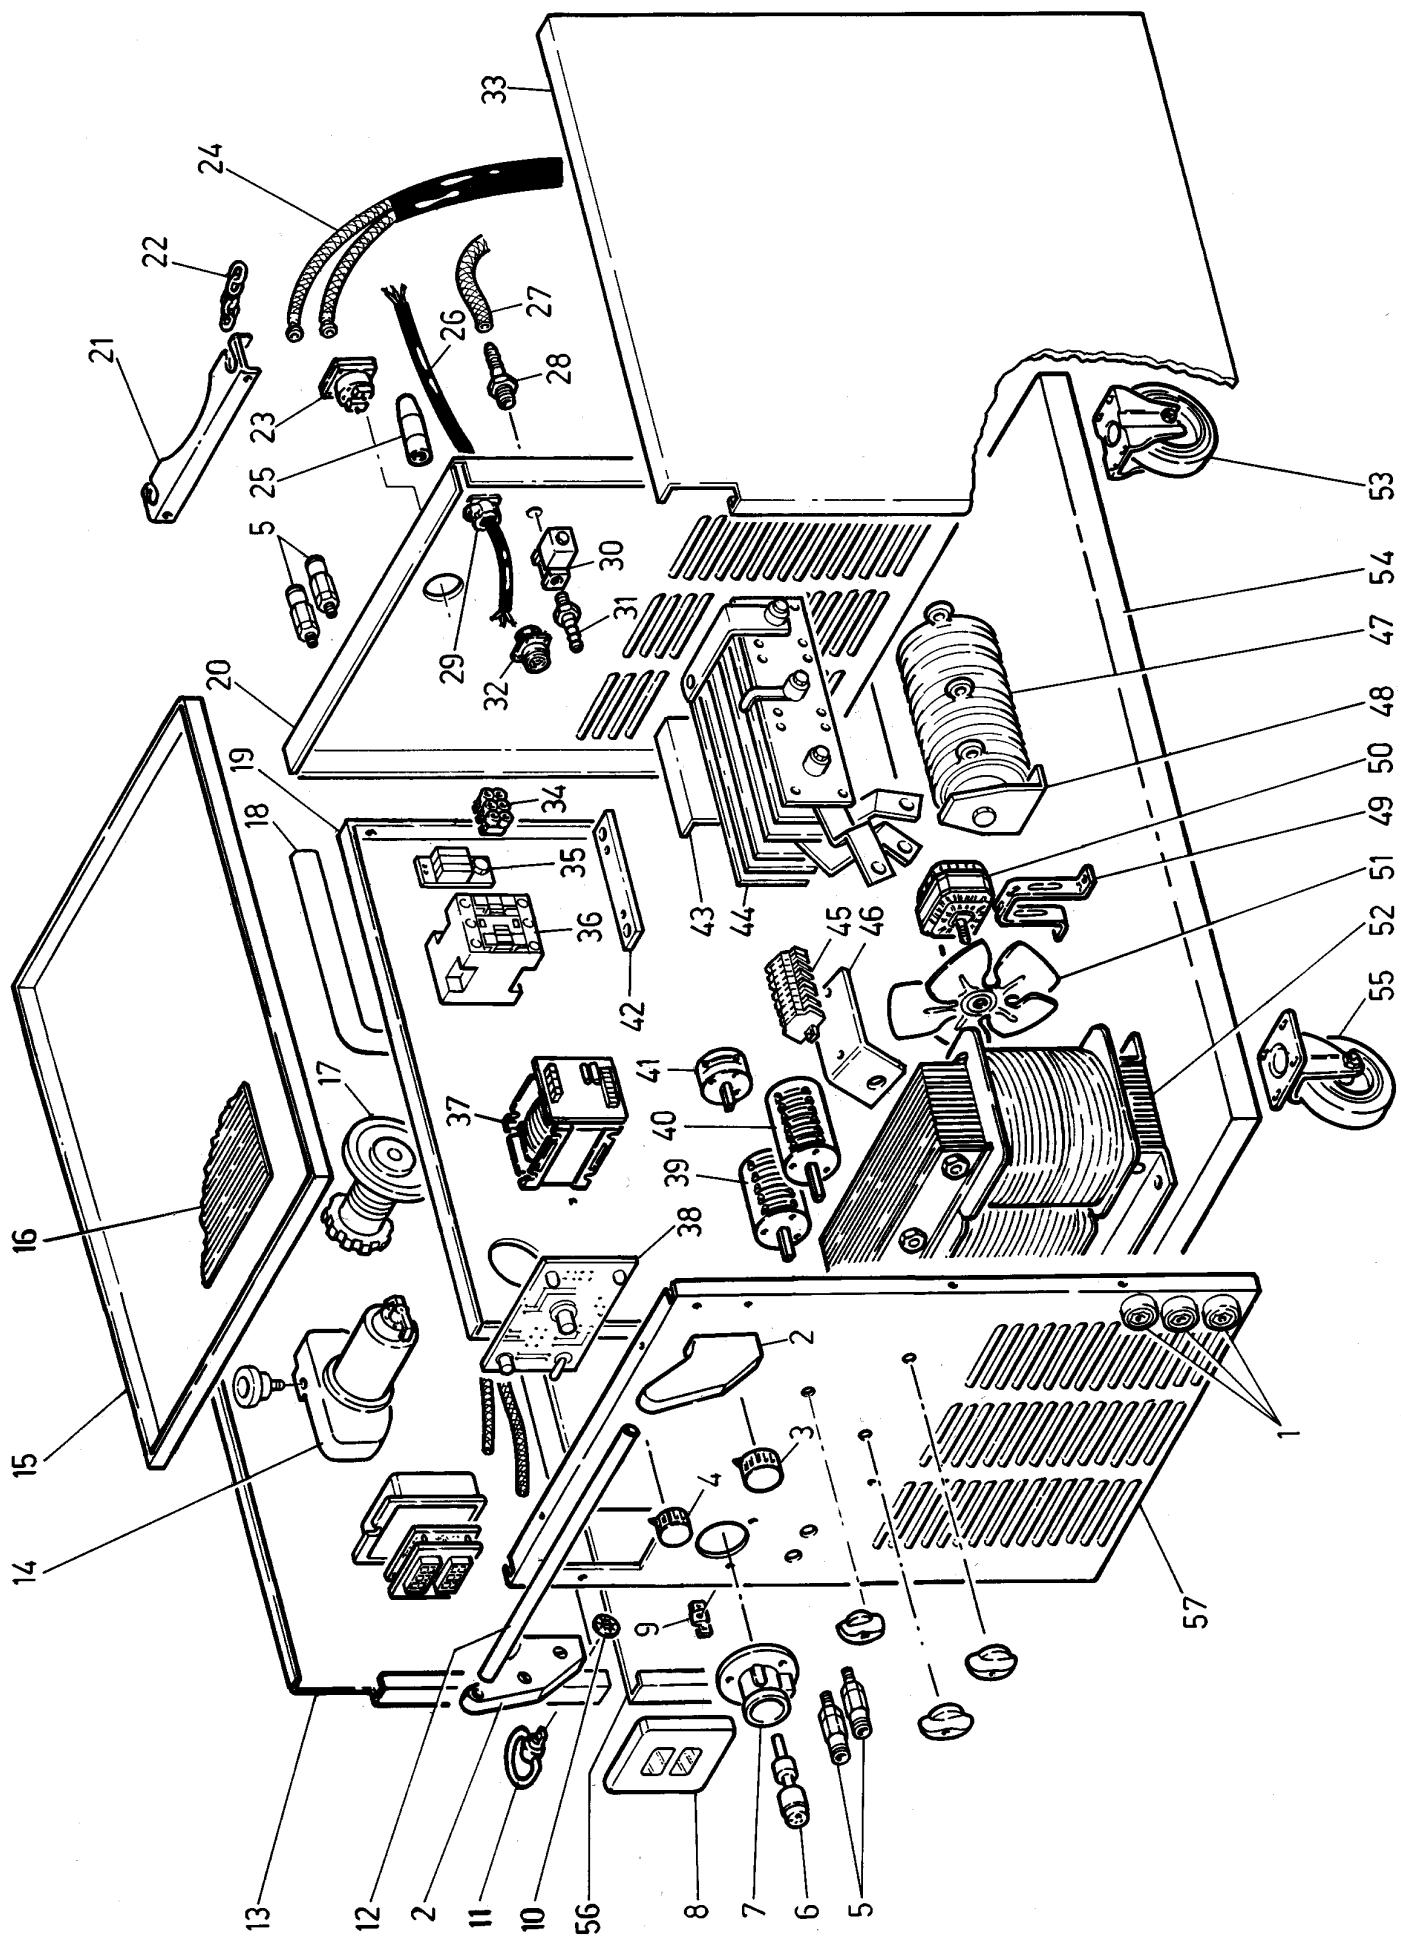

pos	DESCRIZIONE	DESCRIPTION
01	GIFAS	GIFAS SOCKET
02	SUPPORTO MANICO	HANDLE SUPPORT
03	MANOPOLA	KNOB
04	MANOPOLA	KNOB
05	RUBINETTO	TAP
06	ADATTATORE	ADAPTOR
07	FLANGIA ADATTATORE	ADAPTOR FLANGE
08	COPERTURA	COVER
09	CHIUSURA	CLOSING
10	ROSETTA	WASHER
11	CHIUSURA	CLOSING
12	MANICO	HANDLE
13	LATERALE MOBILE	HINGED SIDE PANEL
14	MOTORIDUTTORE	WIRE FEED MOTOR
15	COPERCHIO	COVER
16	COPERTURA GOMMA	RUBBER MAT
17	SUPPORTO BOBINA	COIL SUPPORT
18	TUBO	HOSE
19	PIANO INTERMEDIO	INTERMEDIATE PLANE
20	PANNELLO POSTERIORE	BACK PANEL
21	APPOGGIO BOMBOLA	GAS CYLINDER SUPPORT
22	CATENA	CHAIN
23	PRESA	SOCKET
24	PROLUNGA	EXTENSION
25	CONNETTORE	CONNECTOR
26	CAVO RETE	INPUT POWER CABLE
27	TUBO GAS	GAS HOSE
28	RACCORDO	FITTING
29	PASSACAVO	CABLE OUTLET

La richiesta di pezzi di ricambio deve indicare sempre: numero di articolo, matricola e data di acquisto della macchina, posizione e quantità del ricambio.

pos	DESCRIZIONE	DESCRIPTION
30	ELETTRORVALVOLA	SOLENOID VALVE
31	RACCORDO	FITTING
32	CONNETTORE	CONNECTOR
33	LATERALE FISSO	FIXED SIDE PANEL
34	MORSETTIERA.	TERMINAL BOARD
35	CIRCUITO FILTRO	FILTER CIRCUIT
36	TELERUTTORE	CONTACTOR
37	TRASFORMATORE SERVIZIO	AUXILIARY TRANSFORMER
38	CIRCUITO DI COMANDO	CIRCUIT BOARD
39	COMMUTATORE	SWITCH
40	COMMUTATORE	SWITCH
41	INTERRUTTORE	SWITCH
42	SHUNT	SHUNT
43	SUPPORTO	SUPPORT
44	RADDRIZZATORE	RECTIFIER
45	MORSETTIERA	TERMINAL BOARD
46	SUPPORTO	SUPPORT
47	IMPEDENZA	IMPEDANCE
48	SUPPORTO	SUPPORT
49	SUPPORTO	SUPPORT
50	MOTORE	MOTOR
51	VENTOLA	FAN
52	TRASFORMATORE	TRANSFORMER
53	RUOTA FISSA	FIXED WHEEL
54	FONDO	UNDERCARRIAGE
55	RUOTA PIROETTANTE	SWIVELING WHEEL
56	LATERALE FISSO	FIXED SIDE PANEL
57	PANNELLO ANTERIORE	FRONT PANEL

When ordering spare parts please always state the machine item and serial number and its purchase data, the spare part position and the quantity.